IMAGE QUALITY

If you are having image quality issues, try the following:

- 1. Perform the procedures as indicated on the Cleaning and Maintenance chart for the "Start of the day".
- 2. Check the application settings.
- 3. If using iThresholding, try reducing the Contrast value.
- NOTE: Image calibration should only be performed when suggested by the scanner; or the lamps or imaging guides have been changed. If you need to calibrate, see the User's Guide for procedures.

SUPPLIES*

CAT No.	Description
108 4755	Kodak Feeder Consumables Kit
842 6157	<i>Kodak</i> Extra-Large Feeder Consumables Kit
134 3680	Kodak Extra-Extra-Large Feeder Consumables Kit
896 5279	<i>Kodak</i> Feeder Kit for Ultra Lightweight Paper
197 6703	Kodak Imaging Guide Set / for i1800/ i600/i700 Series Scanners
838 4885	Kodak Printer Ink Cartridge Carrier
135 5155	Printer Ink Cartridges (qty 10)
840 5425	Printer Ink Blotters
818 3386	Enhanced Printer Black Ink Cartridge (qty 9)
159 6832	Enhanced Printer Red Ink Cartridge (qty 9)
113 3842	Kodak Enhanced Printer Ink Cartridge Carrier
169 0783	<i>Kodak Digital Science</i> Transport Cleaning Sheets (qty 50)
853 5981	<i>Kodak Digital Science</i> Roller Cleaning Pads (qty 24)
896 5519	Staticide Wipes for <i>Kodak</i> Scanners (qty 144)
127 1436	Kodak Calibration Targets (qty 5)
894 9000	Kodak White Background Accessory
163 4948	Kodak Manual Feeder
9E3357	Black Background

* Items are subject to change.

IMPORTANT:

- The Roller Cleaning Pad contains sodium lauryl ether sulfate and sodium silicate which can cause eye irritation. Refer to the User's Guide for MSDS acquisition.
- Staticide wipes contain isopropanol which can cause eye irritation and dry skin. Wash your hands with soap and water after performing maintenance procedures. Refer to the MSDS for more information.



i600/i700 Series Scanners



Quick Tips

www.kodak.com

Kodak Field Service: 1-800-356-3253

Kodak Technical Assistance: 1-800-822-1414

Kodak Professional Services: 1-800-525-6325

EASTMAN KODAK COMPANY 343 State Street Rochester, New York 14650 U.S.A. A-61501 / Part #9E7935 September 2007 © Eastman Kodak Company, 2007 TM: Kodak

LEDs ON THE OPERATOR PANEL



LED Descriptions

Color	Name	Function
Green	Power	Illuminated: Scanner is fully powered. Flashing: Scanner is in lamp saver or sleep mode, or when the internal image buffer is full.
Green	Ready	Illuminated: Scanner is ready to scan images. Flashing: Scanner is warming up, calibrating or when the internal image buffer is full.
Yellow	Jam	Illuminated: Scanner has encountered an error that can be corrected by the user. Flashing: Scanner has detected a document jam or multifeed.
Red	Error/ Service	Illuminated : See Chapter 6, <i>Troubleshooting</i> to see if the error can be corrected, otherwise call Service.

VIEW OPERATOR LOG

Illuminated Red LED

Chapter 6, *Troubleshooting*, in the User's Guide provides a description of the LEDs as well as a Problem Solving Chart. If the red LED is illuminated, check the Operator Log which is accessed through the Scan Validation Tool.

If you are using *Kodak* Capture Software, you can check the Operator Log by selecting the **Log** button on the Scanner Setup dialog box.

CLEANING AND MAINTENANCE

Cleaning your scanner and preventative maintenance on a regular basis is required to ensure the best possible image quality.

NOTE: Certain document types generate more paper dust and debris and may require more frequent cleaning than recommended.

Following is a recommended preventative maintenance procedure to prevent costly interruption during production scanning.

Cleaning and Maintenance Procedures

Task # / Procedure		Start of day	Middle of shift	Start of new shift
3	Vacuum output tray and input areas	x		
5	Clean all rollers	x		x
6	Vacuum transport area	х	х	x
7	Remove and vacuum under background strips	x		
8	Remove and clean imaging guides	х		х
9	Vacuum under imaging guides	х		x
16	Run transport cleaning sheet	х		х
18	Wipe imaging guides with cloth	X	X	х

For detailed cleaning and replacement procedures, see Chapter 5, *Maintenance* in the User's Guide.

Several of the cleaning procedures require the use of a vacuum cleaner and attachments (i.e., small brush, crevice tool, etc.).

TASKS

- 1 Turn off the scanner.
- 2 Remove the output tray.
- 3 Vacuum the output tray area and the input area (elevator) using a brush attachment of a vacuum cleaner.
- 4 Open the pod.
- Clean all rollers with a roller cleaning pad* (i.e. upper and lower rollers, feed module and separator module rollers). Inspect the rollers and preseparation pad for wear and replace if necessary.
- 6 Clean the scanner transport area using a brush attachment of a vacuum cleaner.

When cleaning this area, pay particular attention to the following areas:

- · the edges of the transport
- the reflective tape near the front of the transport
- the reflective tape near the front of the pod
- the three ultrasonic sensors at the base of the transport and the pod
- Remove the upper and lower black background strips and vacuum these areas. When finished, reinsert the strips.
- 8 Remove the upper and lower imaging guides.
- Using the crevice tool, vacuum any dust and debris in the imaging guide area particularly on the glass plate between the lamps.
- **10** Clean both sides of the imaging guides with a Staticide wipe*.
- **11** Dry the imaging guides with a dry Staticide wipe.
- **12** Inspect the imaging guides for any scratches and replace them if necessary.
- 13 Replace both imaging guides.
- 14 Close the pod.
- **15** Turn on the scanner.
- 16 Run a transport cleaning sheet through the transport.
- 17 Open the pod.
- Wipe the exposed side of the imaging guides with a lint-free cloth.
- **19** Close the pod and scan a test image to ensure image quality.

* See IMPORTANT notice on back page.